





		Type	Number of axis	Centering	Output option	Environmental	Redundant output	Mounting
	<b>XS-Serie</b>	Finger operated	Two	Return to center				
	<b>XF-Serie</b>	Finger operated	One or less, Two, Three	Return to center	USB, CANbus, CANopen	IP67	0	Panel rear mount, Panel drop in
	<b>JC-Serie</b>	Finger operated	One or less, Two, Three	Return to center	Analog voltage	NONE	0	Panel rear mount
	<b>3000-Serie</b>	Finger operated	One or less, Two, Three	Return to center	Analog voltage, PWM	IP67	1	Panel rear mount, Panel drop in
	<b>HF-Serie</b>	Finger operated	One or less, Two, Three	Return to center	Analog voltage, USB, CANbus	IP67	1	Panel rear mount, Panel drop in
	<b>PC-Serie</b>	Pendant	One or less, Two, Three, More than three	Other	USB	OTHER	0	No pane
	<b>BF BD-SERIE</b>	Finger operated	One or less	Return to center, Friction hold	Analog voltage, PWM	IP67	1	Panel drop in
	<b>BHN-Serie</b>	Finger operated	One or less	Return to center with detents	PWM	IP67	0	Panel drop in

## We are here for you. Addresses and Contacts.

---

### Headquarter Switzerland:

Angst+Pfister Sensors and Power AG  
Thurgauerstrasse 66  
CH-8050 Zurich  
Phone +41 44 877 35 00  
[sensorsandpower@angst-pfister.com](mailto:sensorsandpower@angst-pfister.com)

### Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH  
Edisonstraße 16  
D-85716 Unterschleißheim  
Phone +49 89 374 288 87 00  
[sensorsandpower.de@angst-pfister.com](mailto:sensorsandpower.de@angst-pfister.com)

Scan here and get an overview of personal contacts!



[sensorsandpower.angst-pfister.com](https://sensorsandpower.angst-pfister.com)