

		Technology	Type	Number of axis	Centering	Output option	Environmental	Redundant output	Mounting
	1000-Serie	Switching	Finger operated	Two	Return to center	Digital	IP67	1	Panel rear mount
	8000-Serie	Switching	Finger operated	Two	Return to center	Digital	IP65	0	Panel rear mount, Panel drop in
	9000-Serie	Inductive	Finger operated	Two	Return to center	Analog voltage	IP65	1	Panel rear mount, Panel drop in
	NZ-Serie	Switching	Finger operated	Two	Return to center	Digital	IP67	0	Panel rear mount

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Scan here and get an overview of personal contacts!



sensorsandpower.angst-pfister.com