

		Technology	Type	Number of axis	Centering	Output option	Environmental	Redundant output	Mounting
	TS-Serie	Hall effect	Thumb Controls	Two	Return to center	Analog voltage, USB	IP67, IP69K	1	Panel rear mount, Panel drop in
	FR-Serie	Hall effect	Thumb Controls	One or less	Friction hold	Analog voltage	IP67	1	Panel rear mount, Panel drop in
	HS-Serie	Switching	Thumb Controls	Two	Return to center	Digital	IP67	0	Panel rear mount, Panel drop in
	PC-Serie	Hall effect	Pendant	One or less, Two, Three, More than three	Other	USB	OTHER	0	No pane
	TW-Serie	Hall effect	Thumb Controls	One or less	Return to center	Analog voltage	IP67	1	Panel drop in
	CW-Serie	Hall effect	Thumb Controls	One or less	Return to center	Analog voltage	OTHER	0	Panel drop in

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Scan here and get an overview of personal contacts!



sensorsandpower.angst-pfister.com