

		Spannung [Vr]	Strom If [A]	Gehäuse
	UJ3D1202TS	1200V	2A	TO-220-2L
	UJ3D1205TS	1200V	5A	TO-220-2L
	UJ3D1210KS	1200V	10A	TO-247-3L
	UJ3D1210KSD	1200V	10A	TO-247-3L
	UJ3D1210TS	1200V	10A	TO-220-2L
	UJ3D1220KSD	1200V	20A	TO-247-3L
	UJ3D1220TS	1200V	20A	TO-220-2L
	UJ3D1250K	1200V	50A	TO-247-3L

		Spannung [Vr]	Strom If [A]	Gehäuse
	UJ3D06504TS	650V	4A	TO-220-2L
	UJ3D06506TS	650V	6A	TO-220-2L
	UJ3D06508TS	650V	8A	TO-220-2L
	UJ3D06510TS	650V	10A	TO-220-2L
	UJ3D06512TS	650V	12A	TO-220-2L
	UJ3D06516TS	650V	16A	TO-220-2L
	UJ3D06520KSD	650V	20A	TO-247-3L
	UJ3D06520TS	650V	20A	TO-220-2L

		Spannung [Vr]	Strom If [A]	Gehäuse
	UJ3D06530TS	650V	30A	TO-220-2L
	UJ3D06560KS	650V	60A	TO-247-3L
	UJ3D1210K2	1200V	10A	TO-247-2L
	UJ3D1220K2	1200V	20A	TO-247-2L
	UJ3D1250K2	1200V	50A	TO-247-2L
	UJ3D1725K2	1700V	25A	TO-247-2L

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Scan here and get an overview of personal contacts!



sensorsandpower.angst-pfister.com