

		Technology	Type	Number of axis	Centering	Output option	Environmental	Redundant output	Mounting
	IPD Desktop-Serie	Hall effect	Desktop	One or less, Two, Three	Return to center	USB	Desktop	0	No pane
	IPD Launch-Serie	Potentiometer	Desktop	One or less, Two, Three	Return to center	USB	Desktop	0	No pane
	IPD Ultima-Serie	Hall effect	Desktop	One or less, Two, Three	Return to center	USB	Desktop	0	No pane
	RS Desktop-Serie	Hall effect	Desktop	One or less, Two, Three	Return to center	USB	Desktop	0	No pane
	VM Desktop-Serie	Hall effect	Desktop	Three, More than three	Return to center	USB	Desktop	0	No pane

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Scan here and get an overview of personal contacts!



sensorsandpower.angst-pfister.com