UnitedSiC Is Now qorvo

FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

DATASHEET

UF4C120053K3S

1200V-53mΩ SiC FET

Rev. A, April 2022

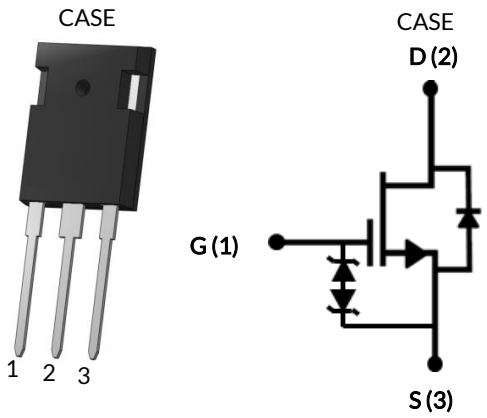

Part Number	Package	Marking
UF4C120053K3S	TO-247-3L	UF4C120053K3S

RoHS COMPLIANT | Pb LEAD FREE | HF HALOGEN FREE

Description

The UF4C120053K3S is a 1200V, 53mΩ G4 SiC FET. It is based on a unique 'cascode' circuit configuration, in which a normally-on SiC JFET is co-packaged with a Si MOSFET to produce a normally-off SiC FET device. The device's standard gate-drive characteristics allows for a true "drop-in replacement" to Si IGBTs, Si FETs, SiC MOSFETs or Si superjunction devices. Available in the TO-247-3L package, this device exhibits ultra-low gate charge and exceptional reverse recovery characteristics, making it ideal for switching inductive loads and any application requiring standard gate drive.

Features

- On-resistance $R_{DS(on)}$: 53mΩ (typ)
- Operating temperature: 175°C (max)
- Excellent reverse recovery: Q_{rr} = 117nC
- Low body diode V_{FSD}: 1.28V
- Low gate charge: Q_G = 37.8nC
- Threshold voltage $V_{G(th)}$: 4.8V (typ) allowing 0 to 15V drive
- Low intrinsic capacitance
- ESD protected: HBM class 2 and CDM class C3

Typical applications

- EV charging
- PV inverters
- Switch mode power supplies
- Power factor correction modules
- Motor drives
- Induction heating

Experts on Design-In

Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

Maximum Ratings

Parameter	Symbol	Test Conditions	Value	Units
Drain-source voltage	V_{DS}		1200	V
Gate-source voltage	V_{GS}	DC	-20 to +20	V
		AC (f > 1Hz)	-25 to +25	V
Continuous drain current [1]	I_D	T_C = 25°C	34	A
		T_C = 100°C	25	A
Pulsed drain current [2]	I_{DM}	T_C = 25°C	100	A
Single pulsed avalanche energy [3]	E_{AS}	L=15mH, I_{AS} =2.7A	54.6	mJ
SiC FET dv/dt ruggedness	dv/dt	$V_{DS} \leq$ 800V	150	V/ns
Power dissipation	P_{tot}	T_C = 25°C	263	W
Maximum junction temperature	$T_{J,max}$		175	°C
Operating and storage temperature	T_J, T_{STG}		-55 to 175	°C
Max. lead temperature for soldering, 1/8" from case for 5 seconds	T_L		250	°C

1. Limited by $T_{J,max}$
2. Pulse width t_p limited by $T_{J,max}$
3. Starting T_J = 25°C

Thermal Characteristics

Parameter	Symbol	Test Conditions	Value			Units
			Min	Typ	Max	
Thermal resistance, junction-to-case	$R_{\theta JC}$			0.44	0.57	°C/W

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

Electrical Characteristics (T_J = +25°C unless otherwise specified)

Typical Performance - Static

Parameter	Symbol	Test Conditions	Value			Units
			Min	Typ	Max	
Drain-source breakdown voltage	BV_{DS}	V_{GS}=0V, I_D=1mA	1200			V
Total drain leakage current	I_{DSS}	V_{DS}=1200V, V_{GS}=0V, T_J=25°C		0.2	50	µA
		V_{DS}=1200V, V_{GS}=0V, T_J=175°C		15		
Total gate leakage current	I_{GSS}	V_{DS}=0V, T_J=25°C, V_{GS}=-20V / +20V		6	20	µA
Drain-source on-resistance	$R_{DS(on)}$	V_{GS}=12V, I_D=20A, T_J=25°C		53	67	mΩ
		V_{GS}=12V, I_D=20A, T_J=125°C		112		
		V_{GS}=12V, I_D=20A, T_J=175°C		159		
Gate threshold voltage	$V_{G(th)}$	V_{DS}=5V, I_D=10mA	4	4.8	6	V
Gate resistance	R_G	f=1MHz, open drain		4.5		Ω

Typical Performance - Reverse Diode

Parameter	Symbol	Test Conditions	Value			Units
			Min	Typ	Max	
Diode continuous forward current [1]	I_S	T_C=25°C			34	A
Diode pulse current [2]	$I_{S,pulse}$	T_C=25°C			100	A
Forward voltage	V_{FSD}	V_{GS}=0V, I_F=10A, T_J=25°C		1.28	1.65	V
		V_{GS}=0V, I_F=10A, T_J=175°C		1.96		
Reverse recovery charge	Q_{rr}	V_R=800V, I_S=25A, V_{GS}=0V, R_G=20Ω di/dt=1300A/µs, T_J=25°C		117		nC
Reverse recovery time	t_{rr}			27		ns
Reverse recovery charge	Q_{rr}	V_R=800V, I_S=25A, V_{GS}=0V, R_G=20Ω di/dt=1300A/µs, T_J=150°C		155		nC
Reverse recovery time	t_{rr}			29		ns

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator Buy Online Spice Models Contact Sales Learn More

Typical Performance - Dynamic

Parameter	Symbol	Test Conditions	Value			Units
			Min	Typ	Max	
Input capacitance	C_{iss}	V_{DS}=800V, V_{GS}=0V f=100kHz		1370		pF
Output capacitance	C_{oss}			43.5		
Reverse transfer capacitance	C_{rss}			2.2		
Effective output capacitance, energy related	$C_{oss(er)}$	V_{DS}=0V to 800V, V_{GS}=0V		54		pF
Effective output capacitance, time related	$C_{oss(tr)}$	V_{DS}=0V to 800V, V_{GS}=0V		100		pF
C_{OSS} stored energy	E_{oss}	V_{DS}=800V, V_{GS}=0V		17.3		µJ
Total gate charge	Q_G	V_{DS}=800V, I_D=25A, V_{GS} = 0V to 15V		37.8		nC
Gate-drain charge	Q_{GD}			9.5		
Gate-source charge	Q_{GS}			10		
Turn-on delay time	$t_{d(on)}$	Note 4, V_{DS}=800V, I_D=25A, Gate Driver =0V to +15V, R_{G_ON}=1Ω, R_{G_OFF}=20Ω Inductive Load, FWD: same device with V_{GS} = 0V, R_G = 20Ω, T_J=25°C		36		ns
Rise time	t_r			12		
Turn-off delay time	$t_{d(off)}$			80		
Fall time	t_f			17		
Turn-on energy	E_{ON}			580		µJ
Turn-off energy	E_{OFF}			175		
Total switching energy	E_{TOTAL}			755		
Turn-on delay time	$t_{d(on)}$	Note 4, V_{DS}=800V, I_D=25A, Gate Driver =0V to +15V, R_{G_ON}=1Ω, R_{G_OFF}=20Ω Inductive Load, FWD: same device with V_{GS} = 0V, R_G = 20Ω, T_J=150°C		37		ns
Rise time	t_r			13		
Turn-off delay time	$t_{d(off)}$			85		
Fall time	t_f			18		
Turn-on energy	E_{ON}			631		µJ
Turn-off energy	E_{OFF}			205		
Total switching energy	E_{TOTAL}			836		

4. Measured with the switching test circuit in Figure 23.

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

Typical Performance - Dynamic (continued)

Parameter	Symbol	Test Conditions	Value			Units
			Min	Typ	Max	
Turn-on delay time	$t_{d(on)}$	Note 5 and 6, V_{DS}=800V, I_D=25A, Gate Driver =0V to +15V, R_G=1Ω, inductive Load, FWD: same device with V_{GS} = 0V and R_G = 1Ω, RC snubber: R_{S1}=5Ω and C_{S1}=95pF, T_J=25°C		39		ns
Rise time	t_r			14		
Turn-off delay time	$t_{d(off)}$			35		
Fall time	t_f			14		
Turn-on energy including R_S energy	E_{ON}			644		µJ
Turn-off energy including R_S energy	E_{OFF}			84		
Total switching energy	E_{TOTAL}			728		
Snubber R_S energy during turn-on	E_{RS_ON}			1.2		
Snubber R_S energy during turn-off	E_{RS_OFF}			2.1		
Turn-on delay time	$t_{d(on)}$	Note 5 and 6, V_{DS}=800V, I_D=25A, Gate Driver =0V to +15V, R_G=1Ω, inductive Load, FWD: same device with V_{GS} = 0V and R_G = 1Ω, RC snubber: R_{S1}=5Ω and C_{S1}=95pF, T_J=150°C		40		ns
Rise time	t_r			16		
Turn-off delay time	$t_{d(off)}$			38		
Fall time	t_f			15		
Turn-on energy including R_S energy	E_{ON}			695		µJ
Turn-off energy including R_S energy	E_{OFF}			99		
Total switching energy	E_{TOTAL}			794		
Snubber R_S energy during turn-on	E_{RS_ON}			1.1		
Snubber RS energy during turn-off	E_{RS_OFF}			2		

5. Measured with the switching test circuit in Figure 24.

6. In this datasheet, all the switching energies (turn-on energy, turn-off energy and total energy) presented in the tables and Figures include the device RC snubber energy losses.

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

Typical Performance Diagrams

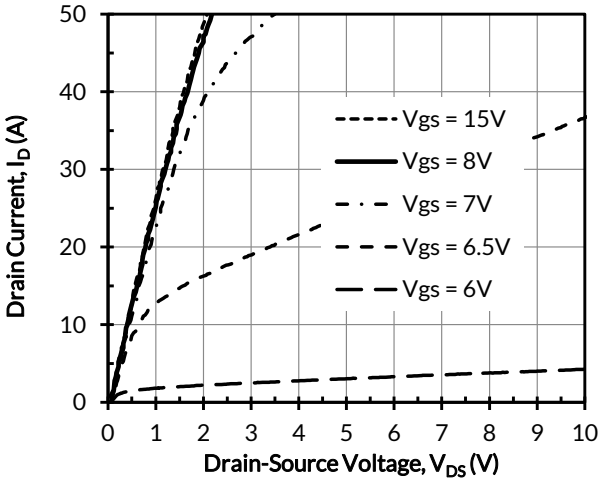

Figure 1. Typical output characteristics at T_J = - 55°C, tp < 250µs

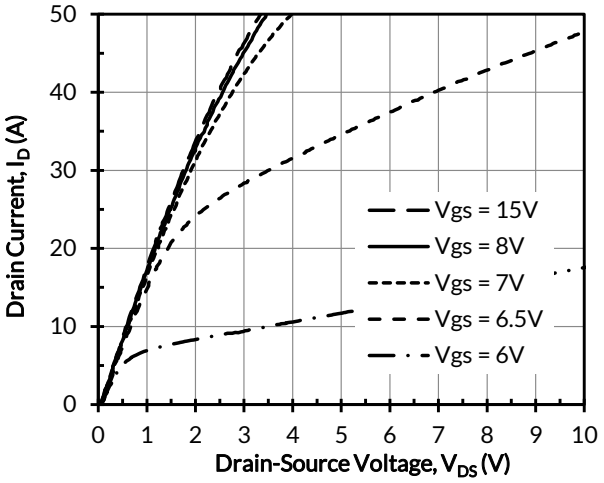

Figure 2. Typical output characteristics at T_J = 25°C, tp < 250µs

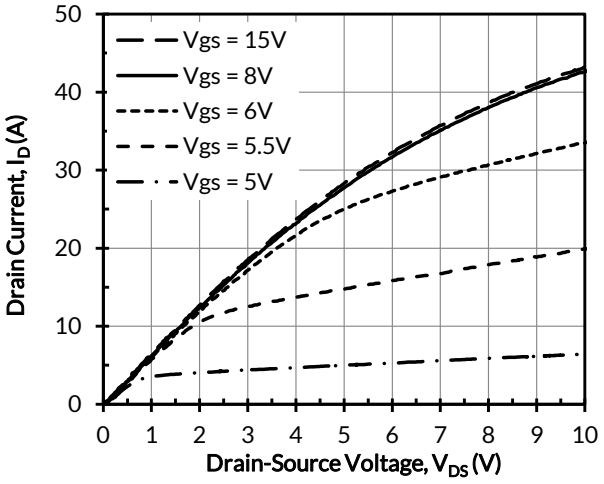

Figure 3. Typical output characteristics at T_J = 175°C, tp < 250µs

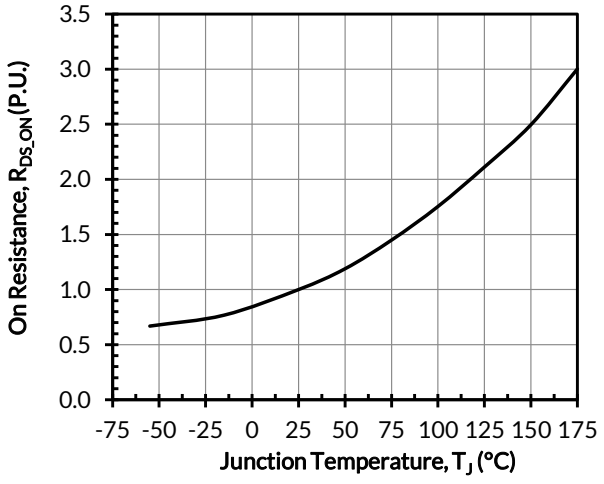

Figure 4. Normalized on-resistance vs. temperature at V_{GS} = 12V and I_D = 25A

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

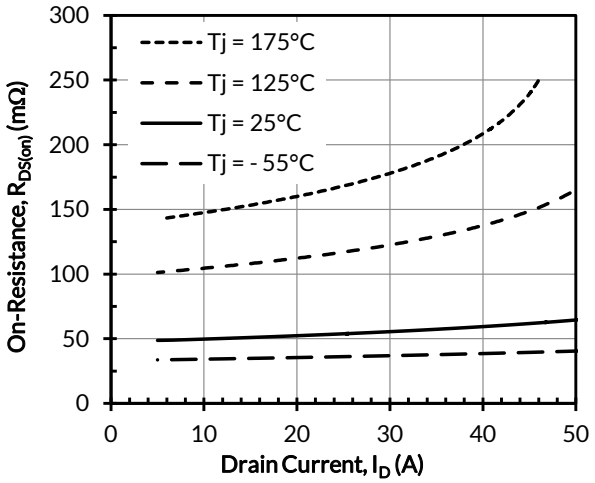

Figure 5. Typical drain-source on-resistances at V_{GS} = 12V

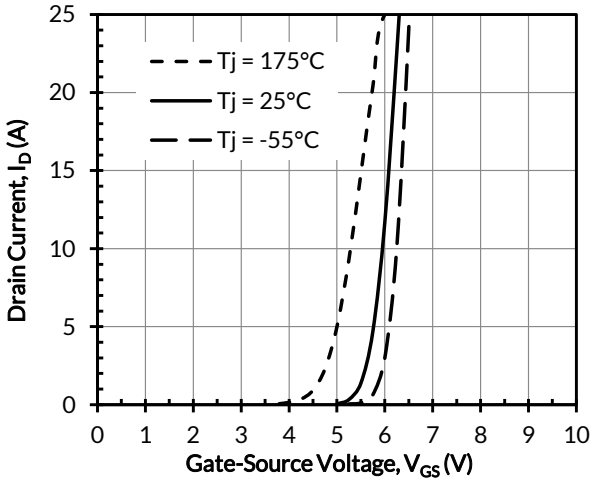

Figure 6. Typical transfer characteristics at V_{DS} = 5V

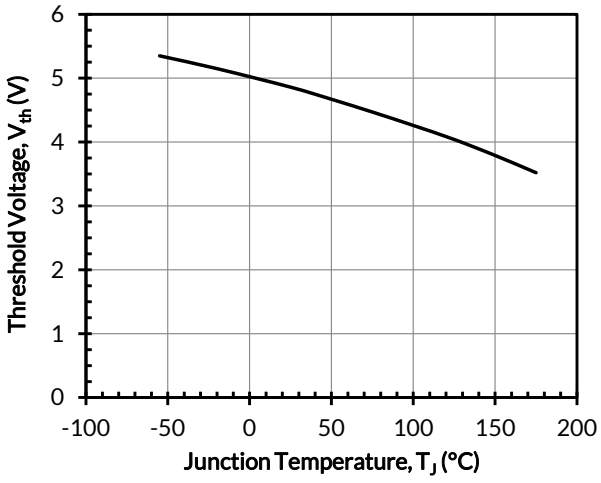

Figure 7. Threshold voltage vs. junction temperature at V_{DS} = 5V and I_D = 10mA

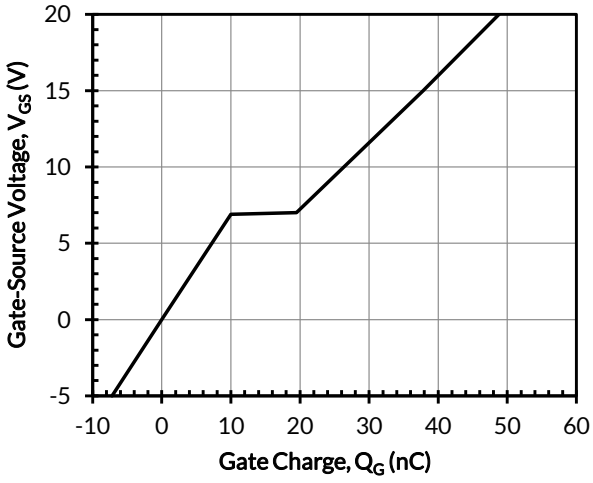

Figure 8. Typical gate charge at V_{DS} = 800V and I_D = 25A

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

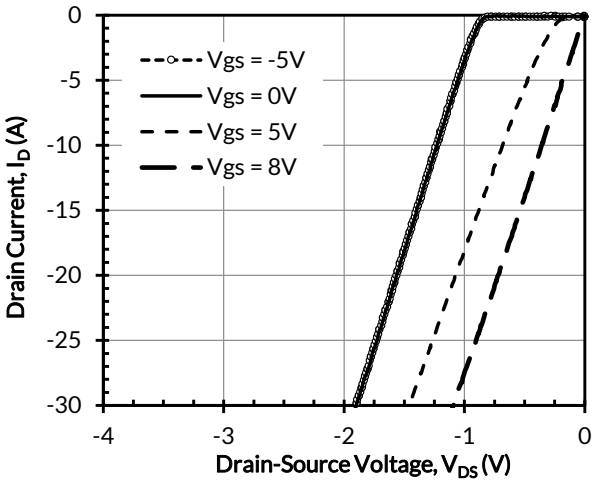

Figure 9. 3rd quadrant characteristics at T_J = -55°C

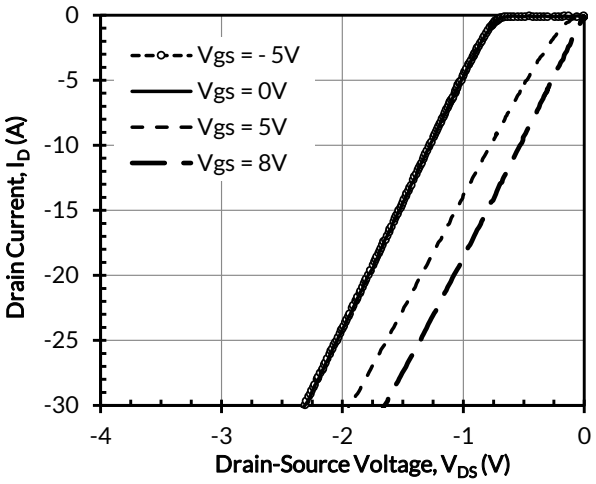

Figure 10. 3rd quadrant characteristics at T_J = 25°C

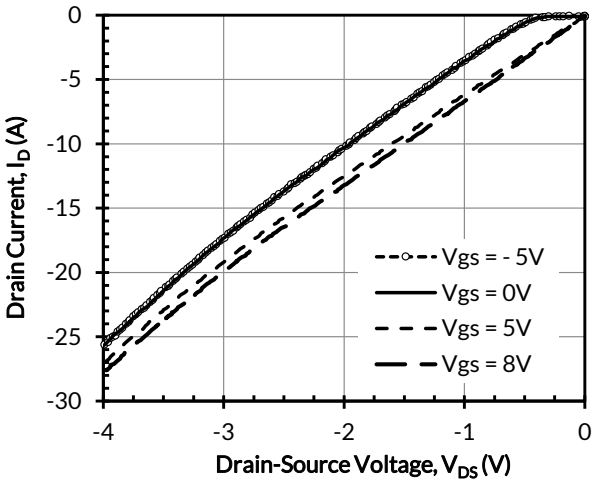

Figure 11. 3rd quadrant characteristics at T_J = 175°C

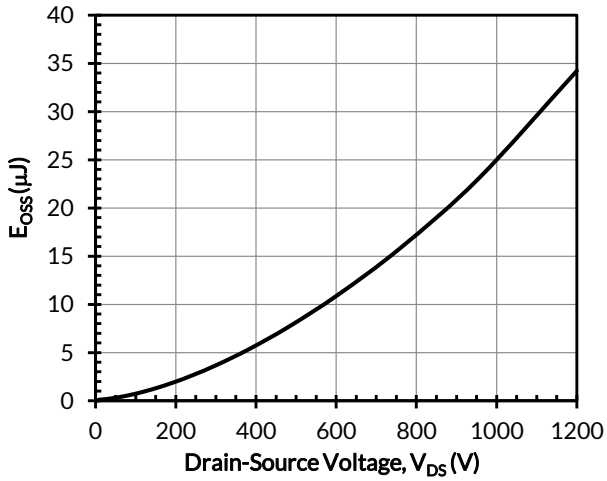

Figure 12. Typical stored energy in C_{OSS} at V_{GS} = 0V

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

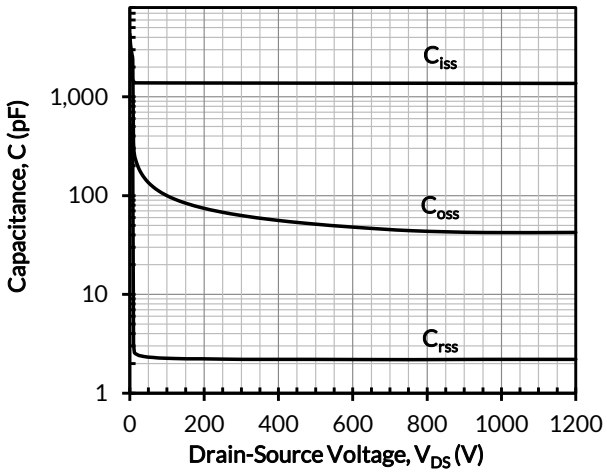

Figure 13. Typical capacitances at f = 100kHz and V_{GS} = 0V

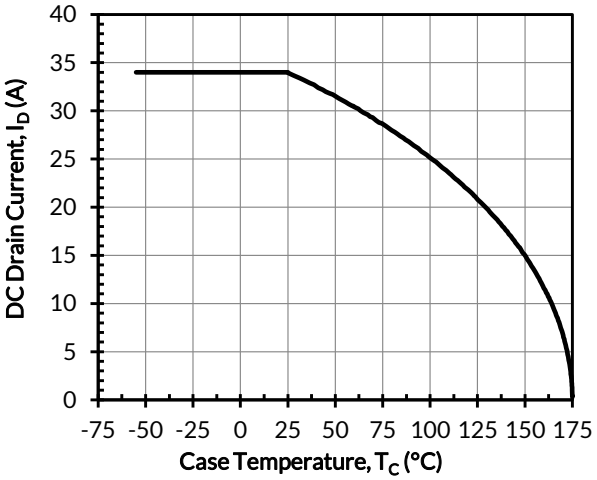

Figure 14. DC drain current derating

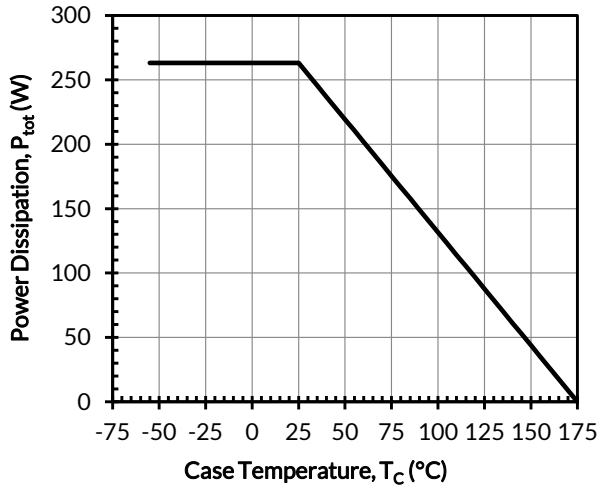

Figure 15. Total power dissipation

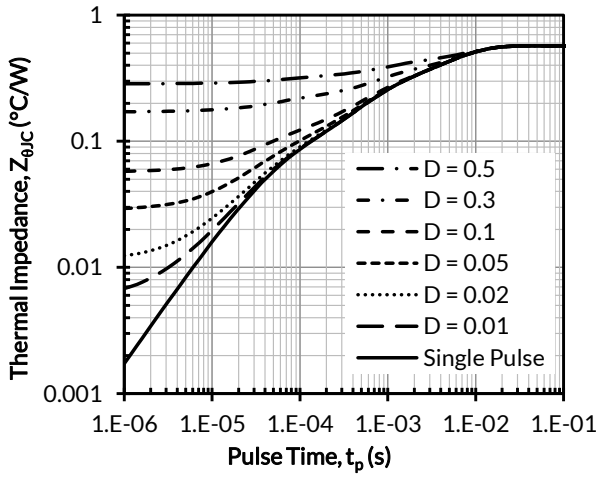

Figure 16. Maximum transient thermal impedance

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

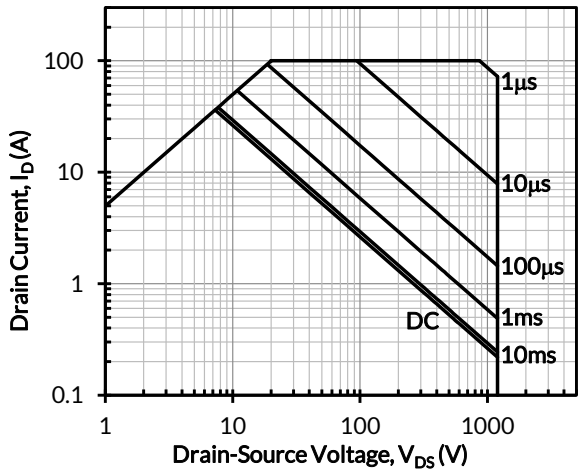

Figure 17. Safe operation area at T_C = 25°C, D = 0, Parameter t_p

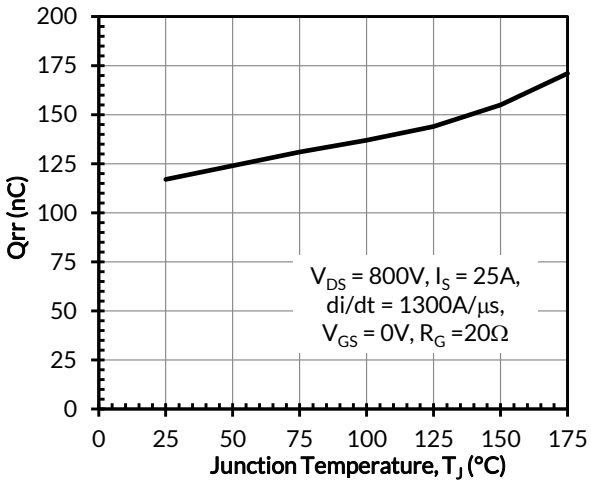

Figure 18. Reverse recovery charge Qrr vs. junction temperature

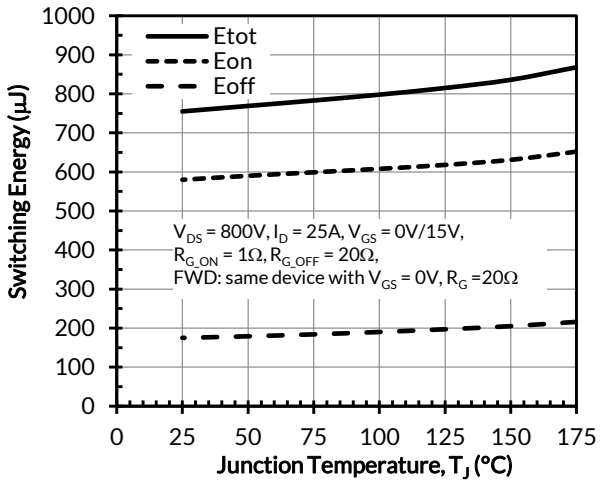

Figure 19. Clamped inductive switching energy vs. junction temperature at V_{DS} =800V and I_D = 25A

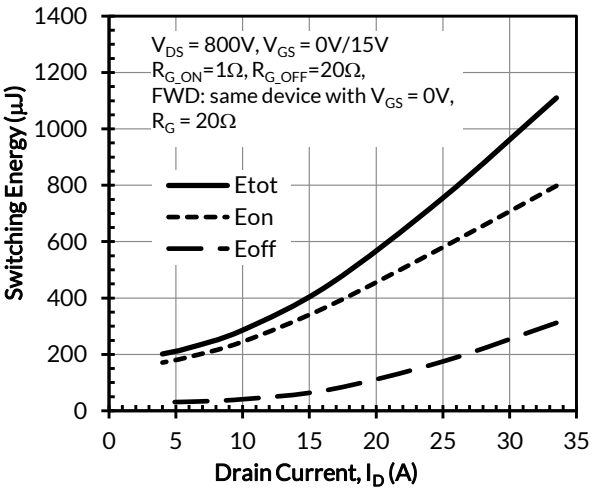

Figure 20. Clamped inductive switching energy vs. drain current at V_{DS} = 800V and T_J = 25°C

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

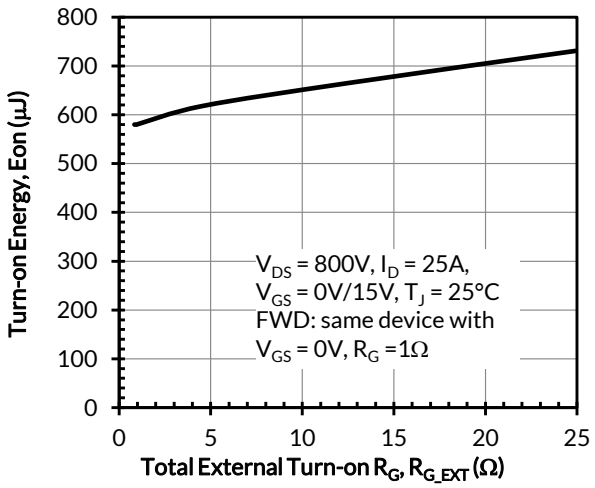

Figure 21. Clamped inductive switching turn-on energy vs. R_{G,EXT_ON}

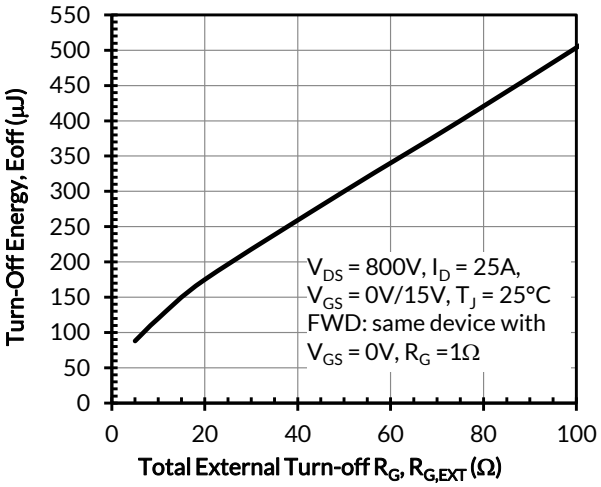

Figure 22. Clamped inductive switching turn-off energy vs. R_{G,EXT_OFF}

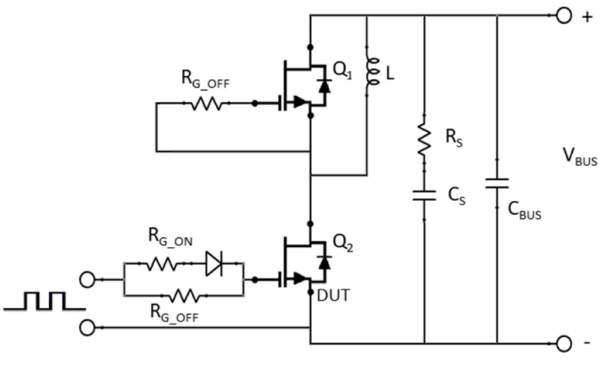

Figure 23. Schematic of the half-bridge mode switching test circuit. Note, a bus RC snubber (R_S = 2.5Ω, C_S=100nF) is used to reduce the power loop high frequency oscillations.

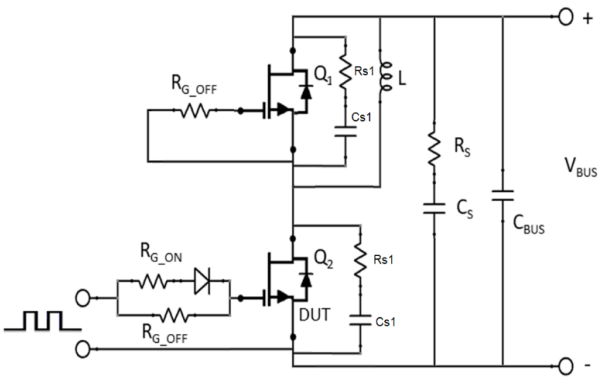

Figure 24. Schematic of the half-bridge mode switching test circuit with device RC snubbers (R_{s1} =5Ω, C_{s1} = 95pF) and a bus RC snubber (R_S = 2.5Ω, C_S=100nF).

Experts on Design-In
Angst+Pfister Sensors and Power

UnitedSiC Is Now qorvo
FET-Jet Calculator | Buy Online | Spice Models | Contact Sales | Learn More

Applications Information

SiC FETs are enhancement-mode power switches formed by a high-voltage SiC depletion-mode JFET and a low-voltage silicon MOSFET connected in series. The silicon MOSFET serves as the control unit while the SiC JFET provides high voltage blocking in the off state. This combination of devices in a single package provides compatibility with standard gate drivers and offers superior performance in terms of low on-resistance ($R_{DS(on)}$), output capacitance (C_{oss}), gate charge (Q_G), and reverse recovery charge (Qrr) leading to low conduction and switching losses. The SiC FETs also provide excellent reverse conduction capability eliminating the need for an external anti-parallel diode.
Like other high performance power switches, proper PCB layout design to minimize circuit parasitics is strongly recommended due to the high dv/dt and di/dt rates. An external gate resistor is recommended when the FET is working in the diode mode in order to achieve the optimum reverse recovery performance. For more information on SiC FET operation, see www.unitedsic.com.
A snubber circuit with a small $R_{(G)}$, or gate resistor, provides better EMI suppression with higher efficiency compared to using a high $R_{(G)}$ value. There is no extra gate delay time when using the snubber circuitry, and a small $R_{(G)}$ will better control both the turn-off $V_{(DS)}$ peak spike and ringing duration, while a high $R_{(G)}$ will damp the peak spike but result in a longer delay time. In addition, the total switching loss when using a snubber circuit is less than using high $R_{(G)}$, while greatly reducing $E_{(OFF)}$ from mid-to-full load range with only a small increase in $E_{(ON)}$. Efficiency will therefore improve with higher load current. For more information on how a snubber circuit will improve overall system performance, visit the UnitedSiC website at www.unitedsic.com

Important notice

The information contained herein is believed to be reliable; however, Qorvo makes no warranties regarding the information contained herein and assumes no responsibility or liability whatsoever for the use of the information contained herein. All information contained herein is subject to change without notice. Customers should obtain and verify the latest relevant information before placing orders for Qorvo products. The information contained herein or any use of such information does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other intellectual property rights, whether with regard to such information itself or anything described by such information. THIS INFORMATION DOES NOT CONSTITUTE A WARRANTY WITH RESPECT TO THE PRODUCTS DESCRIBED HEREIN, AND QORVO HEREBY DISCLAIMS ANY AND ALL WARRANTIES WITH RESPECT TO SUCH PRODUCTS WHETHER EXPRESS OR IMPLIED BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Without limiting the generality of the foregoing, Qorvo products are not warranted or authorized for use as critical components in medical, life-saving, or life-sustaining applications, or other applications where a failure would reasonably be expected to cause severe personal injury or death.

Experts on Design-In
Angst+Pfister Sensors and Power

Angst+Pfister
Sensors and Power

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Scan here and get an overview of personal contacts!

sensorsandpower.angst-pfister.com